

THE VICTOR READER VIBE




Getting to Know Your Vibe

Machine Basics

- The Vibe has eleven keys that are positioned in a clockwise format
- Each key has a numeric value and/or a functional value.
- The keys are divided into four groups.

The Face of the Unit & Front

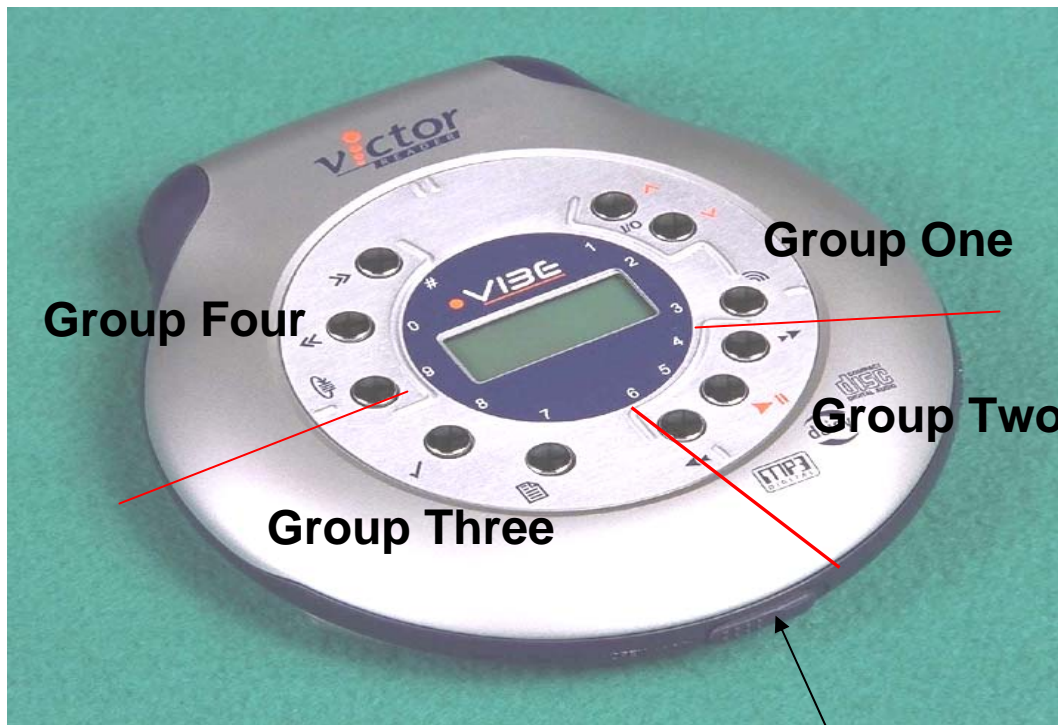

Open Button

Under the Unit

- The battery storage compartment is located underneath the unit
- The unit comes with two rechargeable AA batteries
- You can use regular AA alkaline batteries

The Right Side of the Unit

- **Connector Ports**
 - AC Adapter Port
 - Line Out Port
 - External Speaker/earphone Port
- **Hold Button or Lock Switch**



GROUP ONE

The **Up** Key – Positioned at 1 o'clock; used to increase **Volume** and **Speed**

The **Down** key – Positioned at 2 o'clock; used to decrease **Volume** and **Speed**

The **Volume** and **Speed** Toggle Key – Positioned at 3 o'clock; toggles between **Volume** and **Speed**



First Key - Up Key

The first key (1 o'clock) is also used to **Power On** the Vibe

Second Key - Down Key

The second key (2 o'clock) is also used to **Power Off** the Vibe

Third Key - Volume/Speed Toggle Key

GROUP TWO

The **Fast-Forward** Key – Positioned at 4 o'clock; used to go forward in a book

The **Play/Stop** Key – Positioned at 5 o'clock; used to play or stop a book

The **Rewind** Key – Positioned at 6 o'clock; used to go backwards in a book



Key Four-Fast-Forward

Key Five-Play/Stop

Key Six -Rewind

GROUP THREE

The **Go-To-Page** Key – Positioned at 7 o'clock

The **Bookmark** Key – Positioned at 8 o'clock



Key Eight – *Go-To-Page*

Key Seven - *Bookmark*

GROUP FOUR

The **Menu Key** – Positioned at 9 o'clock

The **Previous Element Key** – Positioned at 10 o'clock; used to move backward one page, section, chapter, or unit

The **Next Element Key** – Positioned at 11 o'clock; used to move forward one page, section, chapter, or unit

Key Eleven – Previous Element

Key Ten – Next Element



Key Nine – *Navigation Element & Info*

Getting Started

Opening the Vibe:

Slide the button to the right (towards the back of the unit) to open the CD-ROM clam shell drive.



To Power ON

Press the first key located at one o'clock.



To Power OFF

Press and hold down the second key located at two o'clock. You will hear one beep tone before the unit powers off

Inserting a CD

- Slide the “Open Button” to the right to open the CD-ROM drive
- Place the CD into the drive, label side up
- Close clam shell drive



Ejecting a CD

- Slide the button in the front of the unit towards the back to open the clam-shell CD-ROM drive and lift out the CD.

Entering Your PIN

- Insert a CD
- You will be prompted to enter your validation code
- Press 7323
- Press the # key located at 11 o'clock (confirmation key)
- You will hear the PIN confirmation


Playing a CD



- Press the PLAY/STOP key to listen to the CD
- Press the same button to STOP the CD

VOLUME

To adjust the volume of a CD

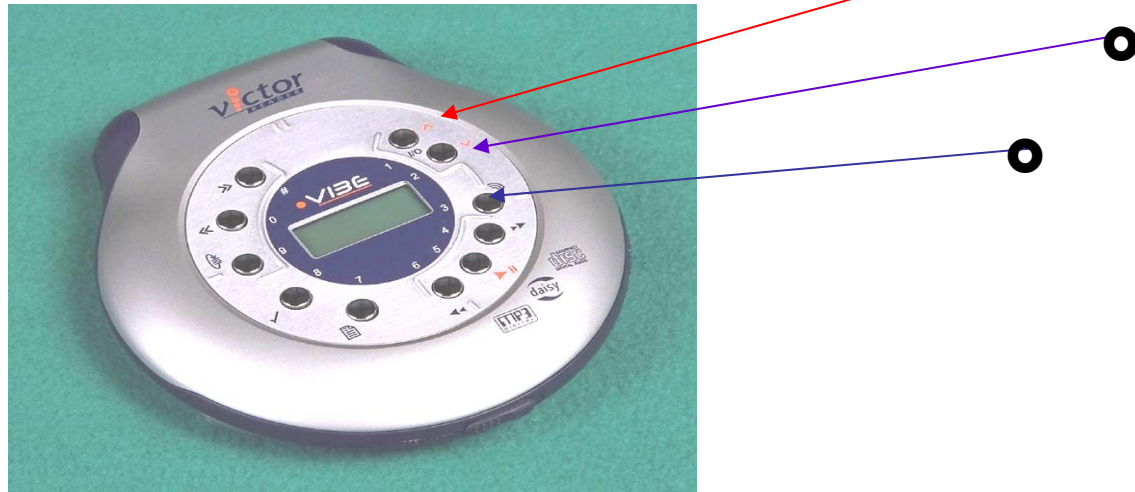


- Press the Volume key located at 3 o'clock to select volume
- Use/Press the UP key located at 1 o'clock to increase the volume
- Use/Press the DOWN key located at 2 o'clock to decrease the volume

The volume is automatically saved at the end of each session

SPEED

- To adjust the speed of a CD

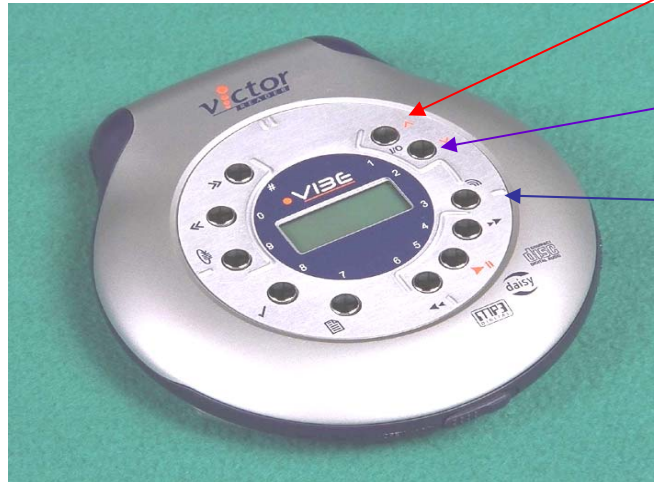

- Press the SPEED key located at 3 o'clock to select the desired speed
- Use/Press the UP key located at 1 o'clock to increase the speed
- Use/Press the DOWN key located at 2 o'clock to decrease the speed

Jumping to a Specific Page

- Press the Go-To-Page key located at 7 o'clock



- Enter the desired page number using the numerical keypad which corresponds to a clock, then press the confirmation key (# sign) located at 11 o'clock

- The unit starts playing automatically

To Page Forward

- Press and hold the MENU Key located at 9 o'clock until you hear "Page"
- To move forward one page, press the NEXT ELEMENT Key located at 11 o'clock
- *You will forward to the "Next Page" each time you press the NEXT ELEMENT Key*

To Page Backward

- Press and hold the MENU Key located at 9 o'clock until you hear "Page"
- To move backwards one page, press the NEXT ELEMENT Key located at 10 o'clock
- *You will go back a page each time you press the NEXT ELEMENT Key*

Inserting a Bookmark

Bookmarks allows you to quickly and easily return to a specific page within a book...

- To insert a Bookmark, press the BOOKMARK key located at 8 o'clock until you hear "Insert Bookmark"
- Press the # key located at 11 o'clock

A bookmark number is automatically assigned using the next available bookmark number. The bookmark will be stored in memory



Bookmarks: 100 bookmarks per book up to 14 books per unit

Bookmark List

- Press the BOOKMARK Key located at 8 o'clock until you hear "Bookmark List"
- Press the PREVIOUS ELEMENT key located at 10 o'clock, or the NEXT ELEMENT key at 11 o'clock to go from one bookmark to the next.
- Press the PLAY/STOP key located at 5 o'clock to move to the bookmark's position and start reading
- Press any other key to cancel and exit the list of bookmarks

Bookmarks are listed in the order they appear in the book, not to their numerical order

Removing All Bookmarks

- Press the BOOKMARK key located at 8 o'clock until you hear "Remove all Bookmarks"
- Press the # key located at 11 o'clock to confirm
- Press any other key to cancel the operation

This only removes the bookmarks in the current book and not bookmarks in other books

Information Key

- **The MENU key located at 9 o'clock has two functions:**

The **Information Key** provides additional information about the current book:

Current page number

Time elapsed

Software version

Time remaining

Total time in book

Total number of pages

THE VICTOR READER VIBE

