

THE VICTOR READER CLASSICX +



The CLASSICX +

- **Designed for students and professionals**
- **Has full DAISY Functionality**
- **Robust, yet so easy to carry**

Under the Unit

- The battery storage compartment is located underneath the unit
- The unit comes with four rechargeable batteries
- Charge Time: 4 hours
- Battery Charge life: up to 10 of continuous play if fully charged

Back Side and Right Side of the Unit



Power Adapter Port - located on the back of the unit.



Connector Port

- Remote Jack Port

Connector Port

- Line Out Port

Use this port to connect to a sound system

Basic Function keys


PLAY Key – to start playing an audiobook, press the PLAY/STOP key

STOP Key – to stop playing an audiobook, press the PLAY/STOP key

REWIND & FAST-FORWARD KEYS

Pressing the REWIND key allows you to go backwards quickly

Pressing the FAST-FORWARD key allow you to go forward quickly

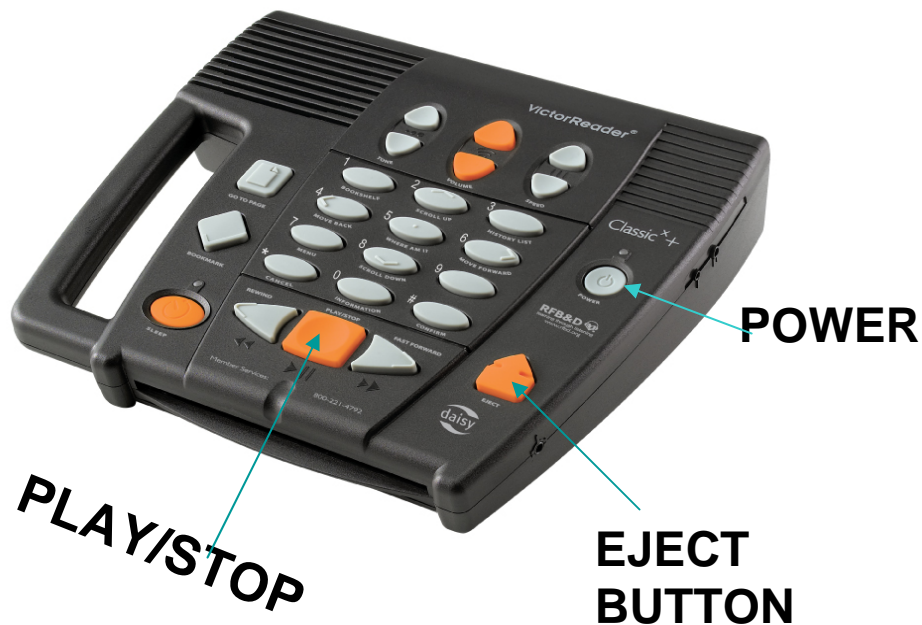

Other Keys



Control Key Functions

TONE keys – left vertical set of keys

To increase the tone, press the top TONE key

To decrease the tone, press the bottom TONE key



VOLUME keys – Vertical Middle Set

To increase the volume, press the top VOLUME key

To decrease the volume, press the bottom VOLUME key



SPEED keys – right vertical set of keys

To increase the speed, press the top SPEED key

To decrease the speed, press the bottom SPEED key



Numeric Key Functions

Navigational keys: 2 , 4, 6, and 8

- Operate navigation functions
- easy access from one structural element to another

Keys **2** and **8** are used to navigate from either:

- Chapters
- Sections
- Page
- Paragraph

Or, any other indexed element that has been defined in the book

Press **Key 2 (scroll up key)** or **Key 8 (scroll down key)** until you hear the desired element.

Keys **4** and **6** are used to move forward or backward relative to the selected element.

Press **Key 4** to move backward an element

Press **Key 6** to move forward an element

Inserting a CD

- The CD-ROM Slot Drive is in the front of the ClassicX+
(Hold the CD label side up)
- Insert by pushing gently, into the drive
- You will hear the title after a beep

Ejecting a CD

- Press the EJECT button located below the POWER BUTTON. The CD automatically slides out.



Eject
Button

Entering Your PIN

- After inserting your CD
- You will be prompted to enter your validation code
- Press 7323
- Press the # key located above the Fast-Forward key (confirmation key)
- You will hear the PIN confirmation

To Go to the Next Page

- Press the **2 key** (scroll up key) or the **8 key** (scroll down key) until you hear “PAGE”
- Press the **6 key** to move forward to the next page. You will move forward a page each time you press the 6 key

To Go to the Previous Page

- Press the 2 key (scroll up key) or the 8 key (scroll down key) until you hear “PAGE”
- Press the 4 key to move backward to the previous page. You will go back a page each time you press the 4 key

Time Jump Navigation Mode

This new function allow you to jump forward or backward either 1, 5, or 10 minutes intervals.

- Press the **2 key** to or **8 key** to select the navigation level until you hear “TIME JUMP” and the jump delay of either 1, 5, or 10 minutes
- Press the **4 key** to move backward by the set jump interval
- Press the **6 key** to move forward by the set jump interval

Inserting a Bookmark

Bookmarks allows you to quickly and easily return to a specific place within a book...

- To insert a Bookmark, press the BOOKMARK key twice or until you hear insert bookmark
- Using the keypad, enter a number (1 to 9998) you wish to assign to the bookmark
- To store the bookmark, press the # key (confirmation key) which is the last key on the last row of the numerical keys

**Bookmark
Key**



It is recommended to use the page number as your bookmark assignment number. You should also record your bookmarks in a notebook or on a separate sheet of paper.

Note: To Cancel an operation in progress, press the * Key.

Jumping to a Specific Bookmark

- Press the BOOKMARK key once or until you hear “go to bookmark.”
- Using the numeric keypad, enter the bookmark number and press the # key.
- *(If you press the PLAY key, the ClassicX+ will automatically go to the requested bookmark and automatically begin to play).*

Removing Bookmarks

- Press the BOOKMARK key five times or until you hear “remove bookmark”.
- Using the numeric keypad, enter the number of the bookmark you want to remove.
- Press the # key to confirm
- To Remove **ALL** Bookmarks in a book, press the BOOKMARK key 4 times or until you hear “remove bookmark”, then press the 9 key on the numeric keypad 5 times.
- Press # key to confirm

Information Key

- The INFORMATION key “0” is located above the PLAY/STOP key

The **Information Key** provides additional information about the current book:

- Playtime remaining
 - Battery Condition
 - Book Title
 - Number of bookmarks placed in book
 - Total play time of the book
 - Playtime elapsed
 - Number of pages
- Press the **0 key**
 - Press either the **4** or **6** key to toggle from one item to the next or previous item

Sleep Mode

- The SLEEP MODE allows you to program a delay period after which the player will shut-off
- Press the SLEEP key to activate sleep mode.
- Press the SLEEP key again to add increments of 15 minutes delay for maximum of 60 minutes
- To turn the SLEEP MODE off, press the SLEEP key until you hear “Sleep off”

Where Am I Key

Press the 5 key to find out:

- the page you are on
- level of navigation
- title of book

Other Keys

- Key 1 – the BOOKSHELF key gives you the number and title of the current book
- Key 3 – the HISTORY key allows you to return to the last five places you have been

NOTE: the history returns to **0** when a different book is entered

- The # key is the confirmation key
- The * key is the cancellation key.