

# THE TELEX SCHOLAR



# The Face & Front of the Unit



# The Back of the Unit



**I/O Port Interface**

**Adapter Port**


# The Right Side of the Unit

- **Connector Ports**

- External Speaker/earphone Port

- **Hold Switch**

*Make sure the **HOLD SWITCH** is in the **OFF** position when powering the unit on. The machine will power on when the switch is in the **ON** position, but will shut off within seconds.*

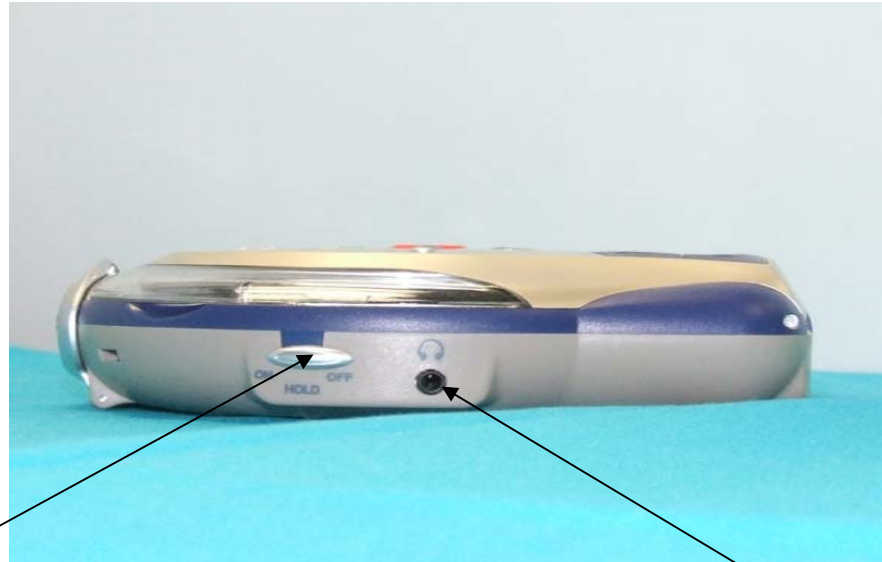

**Hold Switch**

**Earphone Port**

# Getting to Know Your Telex Scholar

The Scholar has a total of 14 keys.

## GUIDE BUTTONS

**ON/OFF** Button

**Key 5** – Red Key in middle of player

**PLAY/STOP/PAUSE** Button

**Key 5** – Red Key in middle of player

## FUNCTION KEYS

**VOLUME** Control Button

Left of LCD Display Screen

**SPEED** Control Button

Right of LCD Display Screen

**UNDO/REDO** Button

Above the LCD Display Screen

**HOLD** Switch

Right Side of the player

# Getting to Know Your Telex Scholar Con't

## NAVIGATION KEYS

**GO TO PAGE** key

\* key

**Page by Page**

Page key

**BOOKMARK**

Bookmark key

**PREVIOUS ELEMENT** key

Key 4

**NEXT ELEMENT** key

Key 6

**SCROLL UP** key

Key 2

**SCROLL DOWN** key

Key 8

**CONFIRMATION** or **SET** key

# key

## Non-Functioning Keys


Key 1    Key 7

Key 3    Key 9

## GUIDE BUTTONS

The **ON/OFF** Button– Red Button positioned in the middle of the unit

The **Play/Stop key** – Also the Red Button positioned the middle of the unit

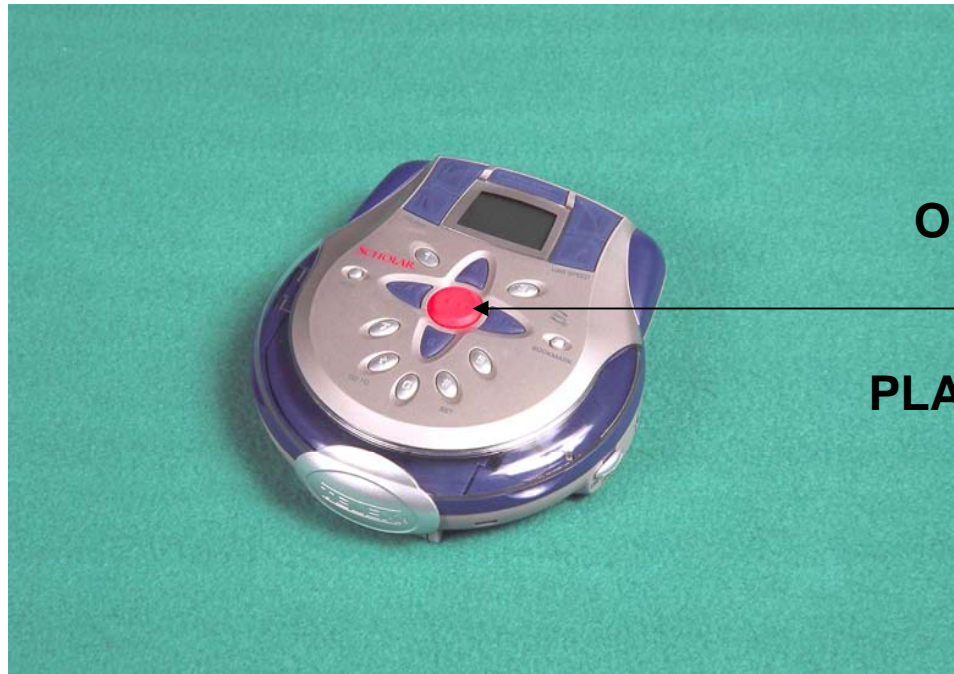

**ON/OFF Button**  
—&  
**PLAY/STOP Button**

## FUNCTION KEYS

### Volume Keys - Left side of the LCD Display

Use the top button to increase the volume

Use the bottom button to decrease the volume



### UNDO/REDO Button

Located above the LCD display screen, use the **UNDO/REDO** button to return to a previous position or place

### Speed Keys – Right side of LCD Display

Use the top button to increase the speed

Use the bottom key to decrease the speed

# Getting Started

**To Power ON/OFF:**

**Press and Hold Key 5 for 4 to 5 seconds, *the red button in the center of the player.***

(You will hear the version number of the player and the LCD screen will display **TELEX SCHOLAR CD PLAYER version XX**)

**Press and hold down the same key to power off the unit.**

(You will hear music when the unit is powering off)

# Inserting a CD

- Open the CD Door Clamp, then open the CD lid.
- Place the CD on the spindle with the printed label side up. You will hear it click in place.
- Close CD Door Clamp.



# Ejecting a CD

- Open the CD Door Clamp, then open the CD lid.
- Remove the CD and close the CD lid.

# Entering Your PIN

- After you have inserted an audiobook, you will be prompted to enter your validation code.
- Press **7323** using the numerical keypad.
- Press the **Set Key** (the # sign).
- You will hear the PIN confirmation message.

# Playing a CD



- Press the PLAY/STOP key (**Key 5 – the red button in the center**)
- Press the same button to STOP the CD

# VOLUME

The Volume controls are located to the left of the LCD display screen.

Increase Volume

Decrease Volume



To Increase the Volume press the top Volume Control button.

To decrease the Volume, press the bottom Volume Control button.

***The volume is automatically saved at the end of each session when you power the player off.***

# SPEED

The Speed controls are located to the right of the LCD display screen.



Increase Speed

Decrease Speed


To Increase the Volume, press the top Volume Control button.

To decrease the Volume, press the bottom Volume Control button.

***To return to “NORMAL” speed, simultaneously press the top and bottom speed control buttons.***

# Jumping to a Specific Page

- Press the Go-To-Page key (\* Key) then the Page Key

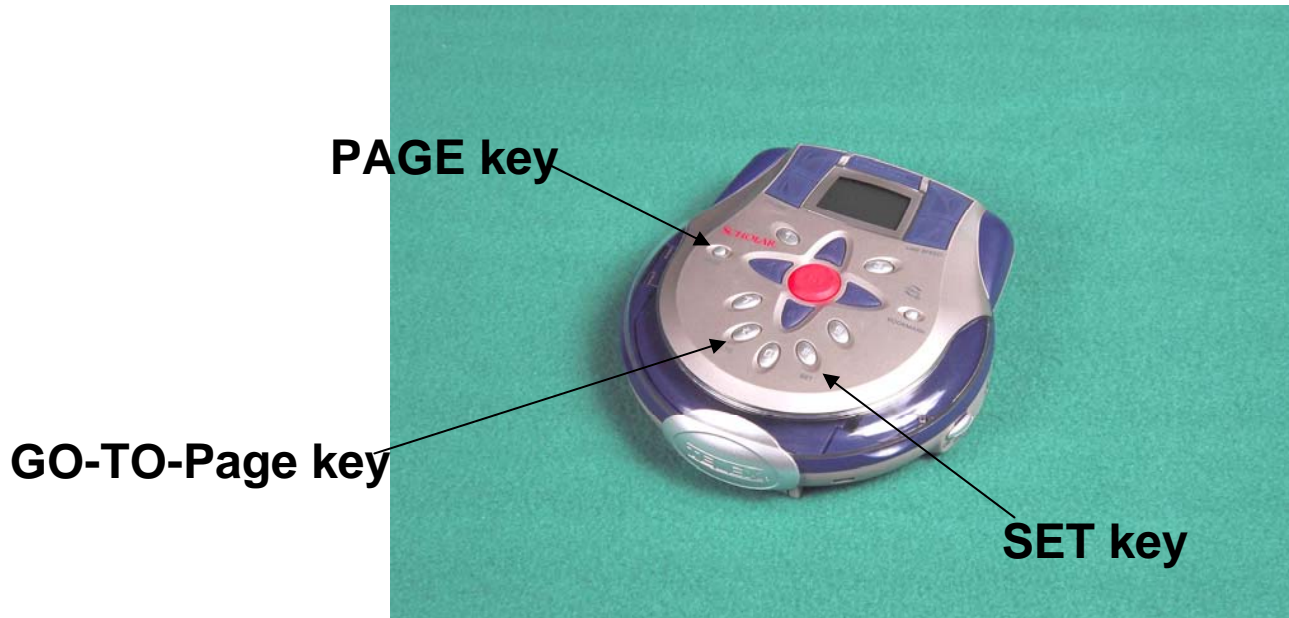

- Enter the desired page number using the numerical keypad which corresponds to a telephone key pad, then press the **Set** key (# sign) and **PLAY** button
- The unit starts playing automatically at the requested page number.

## To Page Forward

- Press the **PAGE** key
- To move forward one page, press the **6 key** to page forward one page, chapter or unit.
- *You will forward to the “Next Page” each time you press the 6 key*


## To Page Backward

- Press the **PAGE** key
- To move back one page, press the **4 key** to page back one page, chapter or unit.
- *You will go back a page each time you press the 4 key.*

# Inserting a Bookmark

**Bookmarks** allows you to quickly and easily return to a specific page within a book...

- To insert a Bookmark, press the **SET** key.
- Type in a number from 1 to 32 using the numerical key pad.
- Press the **BOOKMARK** key.
- The Bookmark will be inserted in the current reading position.

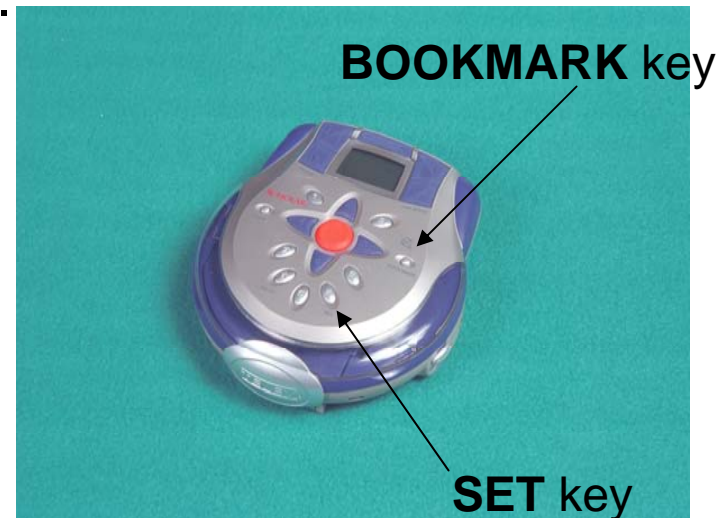

**Bookmarks:** 32 bookmarks per book. If you enter bookmark 33, the Scholar will overwrite your oldest bookmark. Bookmarks cannot be deleted, but they can be overwritten by re-assigning them.

# JUMPING TO SPECIFIC BOOKMARKS

- Press the **GO TO** or **\* key**.
- Enter the desired bookmark number using the numerical key pad.
- Press the **Bookmark key** and the **PLAY button**

## MOVING BETWEEN BOOKMARKS

- Press the **BOOKMARK** key.
- Press the **4 key** to move to the previous book mark.  
Each time you press the **4 key**, you will move back to the next bookmark.
- Press the **6 key** to move forward to the next bookmark.
- Each time you press the **6 key**, you will move forward to the next bookmark.

# Information Key

- **The UNDO//REDO button serves as the information key.**

The **Information Key** provides additional information about the current book:

Current page number

Title of Book

# Other Helpful Tips

- When you install batteries, be sure the battery door clicks into place.
- To hear an audio book, you will need either headphones or an external speaker. Make sure they are plugged into the right port.
- You can use either AA rechargeable batteries or alkaline batteries. Always replace all 4 batteries.
- If you are using rechargeable batteries, the batteries will not charge automatically while the unit is plugged in with the AC adapter.